

2D Barcode Scanner

User Guide



Warning: Do not arbitrary scan the barcodes in this manual


Ver 2.0
US-EN



YM67

DR40/18

Application

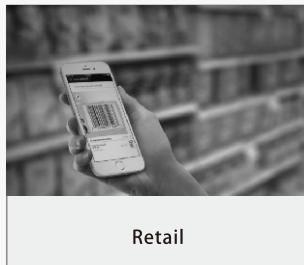

Retail



Logistics




Shoes & Footwear Retail



Healthcare




Government

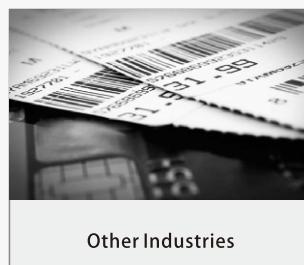

Other Industries

Quality Control

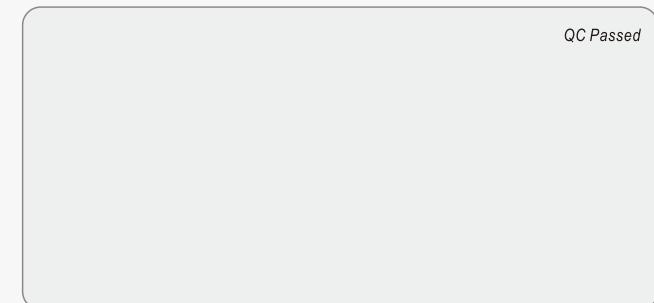

Maintenance



Remove the cable before clean device, clean it with soft cloth or tissue dip a little water or some neutral detergent. You have to clean it with water again, if you choose neutral detergent.

Do not use solvents (such as alcohol, Propyl alcohol and other chemicals) to clean.

Some products containing battery, do not put the scanner near or into fire that could cause explosion accident, please recycle the waste battery to protect environment.

Do not attempt to disassemble the machine, If the maintenance engineer is not authorized by our company disassemble the device, it may be damage the device and void your warranty.



Restore Default Settings



Restore Default Settings



Continue Mode



Trigger Mode

Trigger Mode



Sound-On



Decoding Sound-On



Sound Setting






Sound-High



Sound-Low

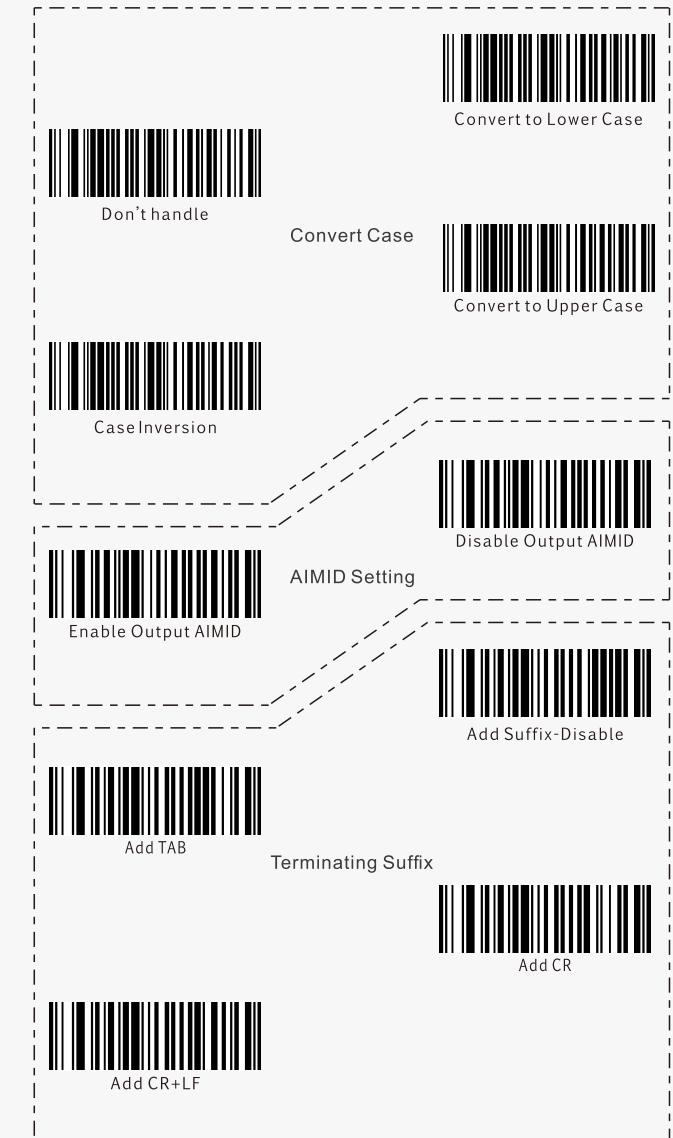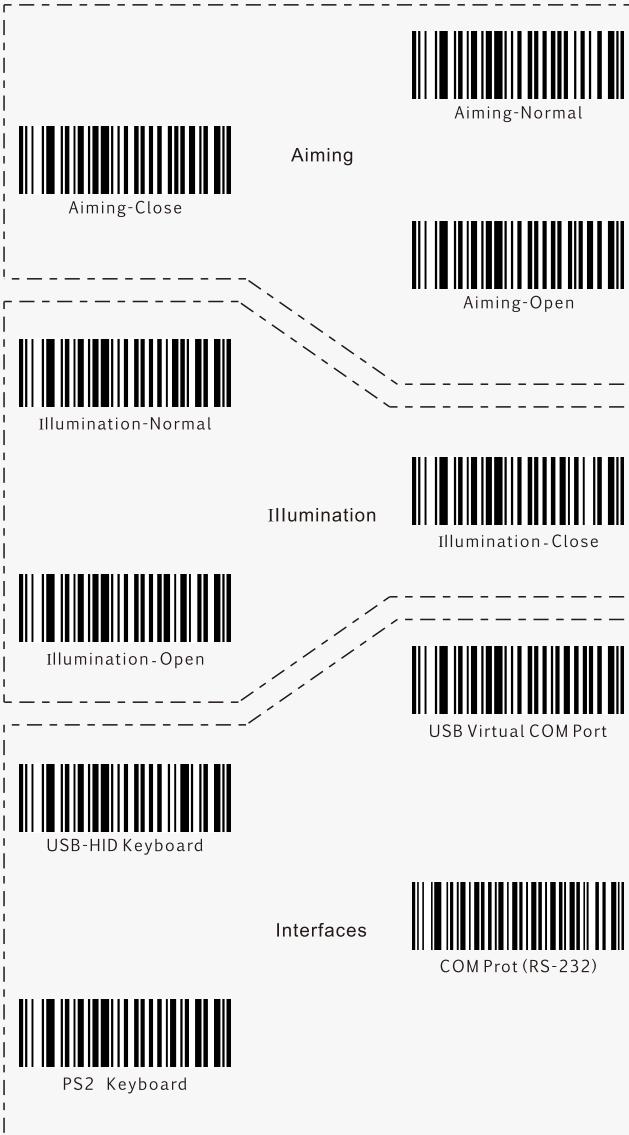

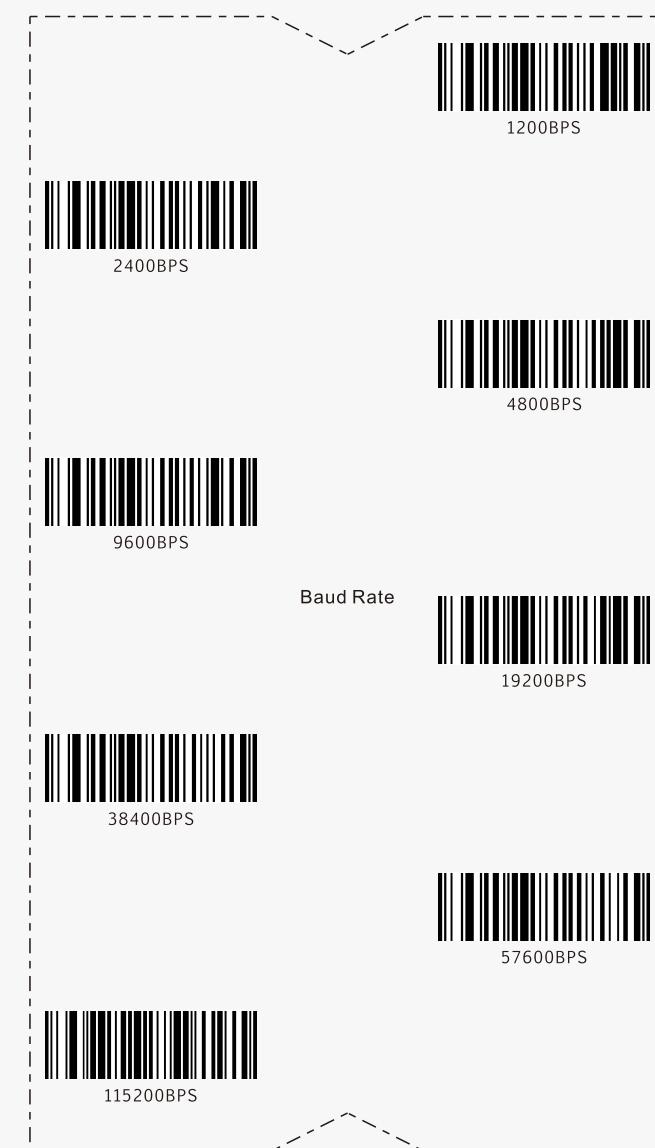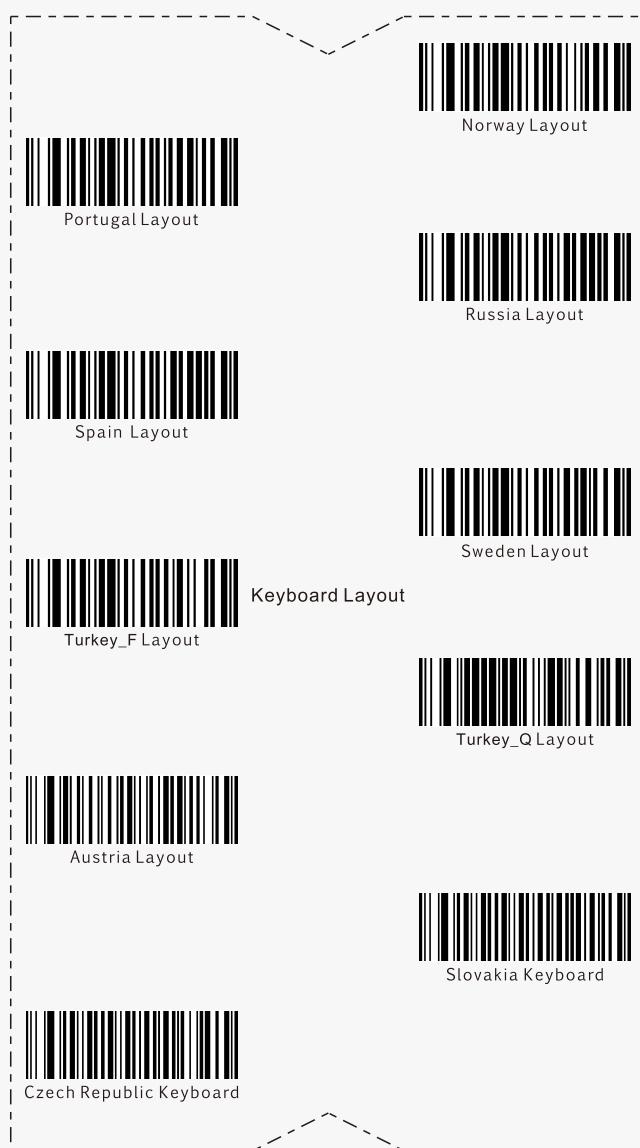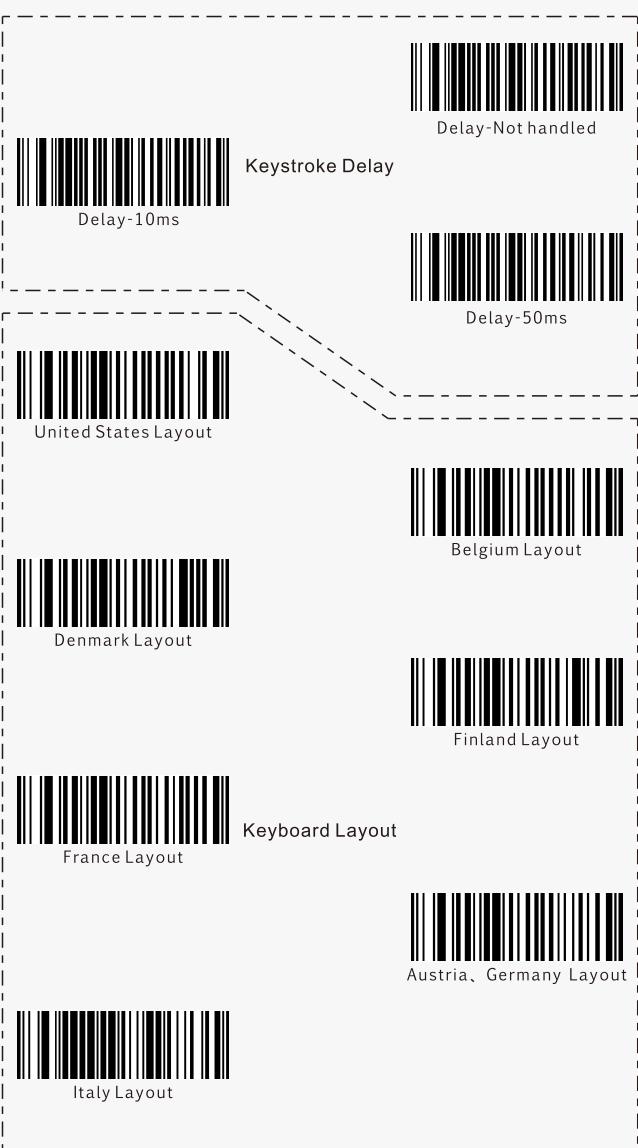

Code 93 Setting



Code93-Disable



Code93-Enable

Codebar Setting



Codebar-Disable



Codebar-Enable

Matrix 25 Setting



Matrix 25-Disable



Matrix 25-Enable

Code 11 Setting



Code 11-Disable



Code 11-Enable

Standard 25 Setting



Standard 25-Disable



Standard 25-Enable



MSI-Disable

MSI Setting



MSI-Enable




Gs1 DataBar-Disable

Gs1 DataBar Setting



Gs1 DataBar-Enable

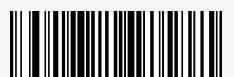

Code 11-Disable

Han Xin Setting



Code 11-Enable



Warning: Do not arbitrary scan the barcodes in this manual

Ver 2.0
US-EN



YM67